

Koason BMW X1 E84 (2009-2015) INSTALL GUIDANCE



1. Use crowbar to prize up the A/C vent, and take the flat cable out from emergency light key.



2. Remove 2 screws below car storage compartment or screen display.



3. Remove storage compartment.
Note: It is same dismantling way for X1 with screen)



4. Use crowbar to prize up decorative frame of A/C panel.



5. Use crowbar to prize up A/C panel and take off flat cable.



6. Take off the two screws below original CD and pull original CD out.




7. Unplug power cable on CD.



8. Connect power cables together, plug original power cable into the female socket of android power cable. NOTE: Original optics fiber cable move to android male plug at same position.



9. Plug android main cable into original CD.

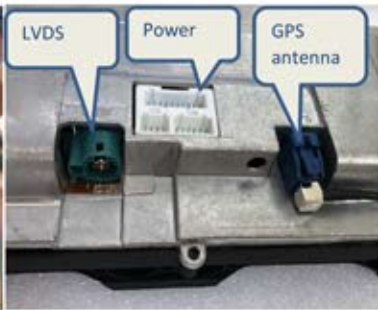

10. Connect original LVDS cable to screen LVDS port, plug power cables of android unit, Note: GPS antenna can be put near the rear windscreen.



11. Pull USB cable via glove box in passenger seat.



12. Take original knob decorative frame out. (if there is original iDrive knob in car, forget this step)



13. Take this box away and put android iDrive knob controller back. (if there is original iDrive knob in car, forget this step)



14. The effect picture after iDrive knob installed.



15. The effect picture for comparison.



16. Put the original CD, A/C vent back and screw up, installation finish.