

Koason 5 Series F10/F11(2011-2017) INSTALLATION GUIDANCE



1. Pry up AC vent panel.



2. Unscrew the screws of original screen and CD .



3. Take off the screen.



4. Pry up original CD panel.




5. Unplug the wire of original CD panel and take off panel.



6. Unscrews 2 screws beside CD and take out CD.



7. Unplug power cable.

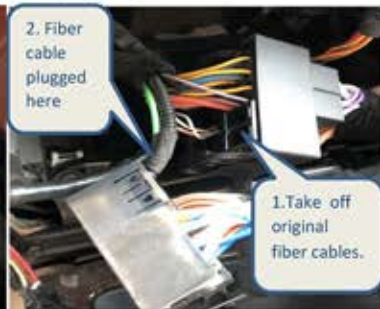

8. Connect power cables together, plug original power cable into the female socket of android power cable. NOTE: Original fiber cable switch to android male plug.



9. Plug power cable into original CD.



10. Put USB cable into container, bring cable passing through right SRS cover, Note: Fix SRS cover by tape, not unplug flat cable, or else SRS fault code will show up.



11. USB cable into container, and put SRS cover back.



12. Plug the flat cable of original CD panel, put panel and CD back, don't screw it now.



13. Connect original LVDS cable to unit LVDS port, plug power cables of android unit, Note: GPS antenna installed onto the rear windscreen.



14. Power on car, check if android unit has sound or not, if it has sound, no need to check next step, if no sound, please connect "Audio out" cable into AUX input, check sound again and power off unit if has sound.



15. Put back CD panel, AC vent trim and android unit, screw up and finish installation.
10. 25inch screen after-installation



16. if install a 12.3inch screen, please put plastic stand back to original screen place, fix it with screws and wiring android screen and buckle up.



17. Put back CD panel, AC vent trim and android unit, screw up and finish installation.



12. 3inch screen after-installation