


Koason BMW M3 F20 F22 F25 F30/F31/F32/F33/F45/F36/F80/F82/F15/F48 NBT INSTALL GUIDANCE



1. Pry up AC vent panel.



2. Remove AC vent panel.

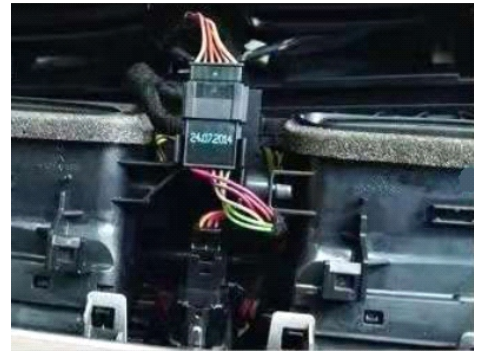

3. Take off flat cable of AC panel.



4. Pry up the trim cover below cd.



5. Remove flat cable on trim cover.



6. Take off the screws .



7. Remove the screen and take off LVDS cable .




8. Plug off flat cable from CD panel.




9. Remove screws on CD.



10. Unplug power cable on CD.

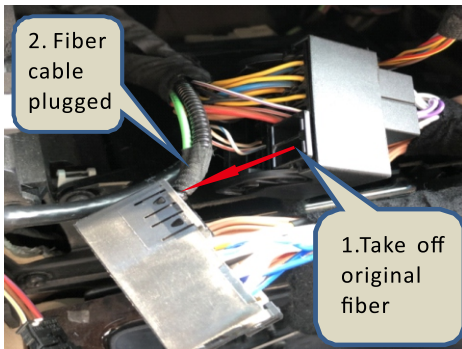

11. Connect power cables together, plug original power cable into the female socket of android power cable. Note: Original fiber cable switch to android male plug.

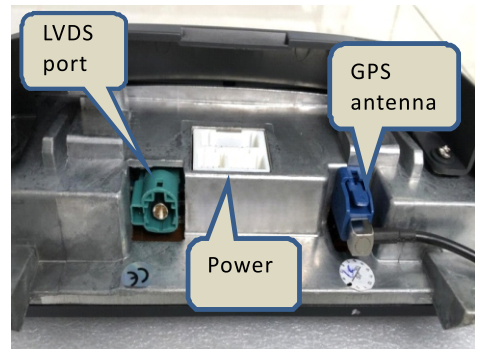


12. Connect original LVDS cable to unit LVDS port, plug power cables of original CD and android unit, Note: GPS antenna installed onto the rear windscreen.




12. Connect flat cable of CD ,CD panel, trim cover ,AC vent and put back .



13. Installation finish.

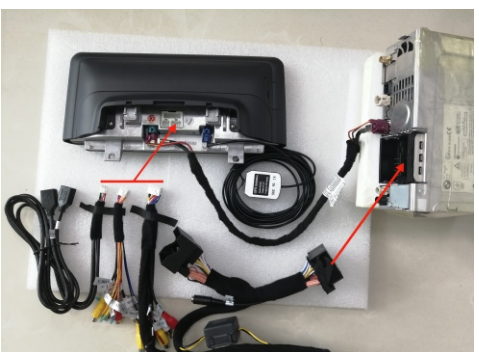

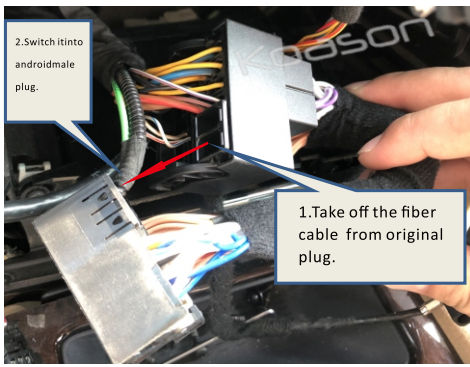

BMW NBT System installation attention



1. If Car has fiber cable, have to switch it from original plug into our unit male plug as following:

Whether the optical cable has been plugged in properly, you only need to check the reversing, iDrive button and steering wheel control functions work properly, and if the Android screen can be closed after the key is removed. If all the above work ok, fiber cable switch is correct. If no work or not properly as original, the optical cable is not connected properly. Please check the cable connection or the position is wrong.

BMW NBT System installation troubleshooting

1. original menu is showing abnormal.

1.1. Choose the right cartype in factory setting, Route, Set-System info.- factory setting (code:2018)- CarType NBT has 3 cartypes available for choice, double click the cartype to confirm it, press 2 seconds "MENU" key on idrive and switch to original to see if screen is normal, if not, choose another NBT cartype until it is showing correctly.

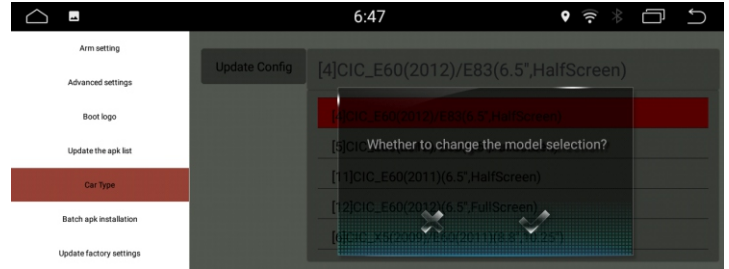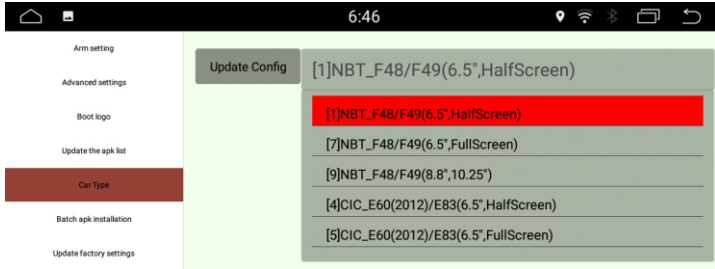

2. Android has no sound.

For most NBT models, the "audio out" line does not need to be connected. If there is no audio cable on the original vehicle wire, it is necessary to connect the "audio out" extension line to the original vehicle aux hole

2.1. Check if there is 3 cables in original power cable (photo1). If no such cable, need to connect Audio out cable to AUX hole as photo2

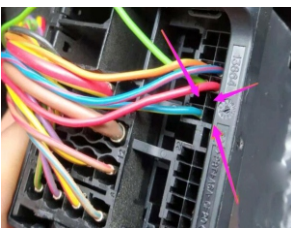


photo1


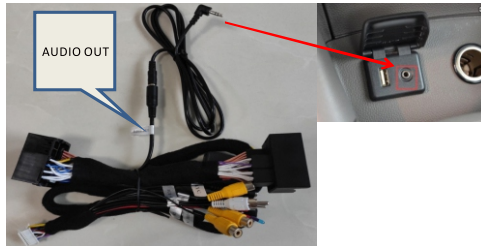



photo2

2.3. Original AUX switching mode selection, Please chooses Manual switch

2.4. In original radio menu, go to "Media- Aux" menu, touch screen to the Android music to hear the sound.

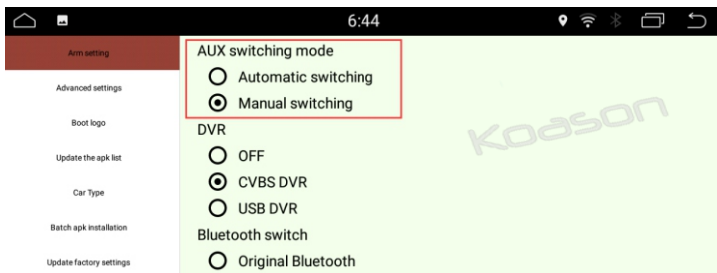


2.2. Select original unit brand in factory setting:-Arm setting- original CD brand.

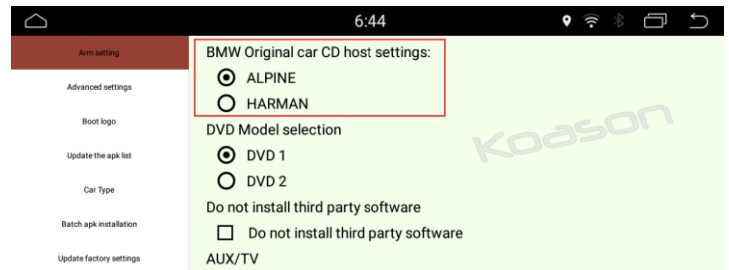


3. Sound quality checking.

Please check the volume on android unit, the default is 30, if it is above 30, please adjust it below 30.

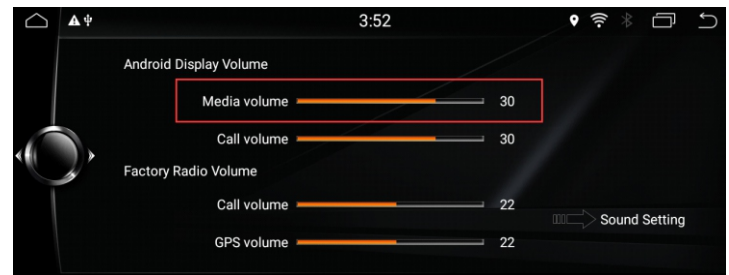

Rear camera wiring for Auto gear.

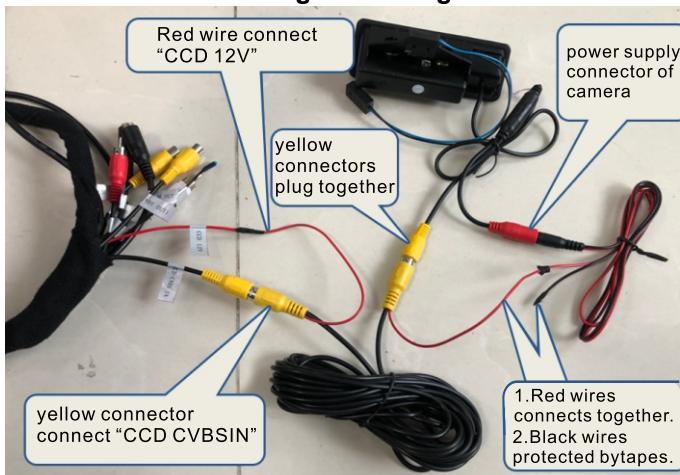

Attention: Electronic user manual is a PDF file inside Apps ; If Carplay function available, please connect iPhone via USB OTG cable and choose Z-Link in Apps .

Note: When use Carplay function, pls disconnect mobile to android USB port. or carplay not work.